



For more information on our products and services visit our website at [www.advanced-engineering-group.com](http://www.advanced-engineering-group.com)

## Woven Wire General Hints & Ordering

- When ordering screencloths it is safer to work in millimetres eg. 1.83metres becomes 1830mm.
- Screencloth length should match clamping bar length.
- Two or more screencloths should not be tensioned with one clamping bar.
- When joining screencloths approximately 12mm aperture and finer they should overlap by 25mm. The first or feed screencloth should always overlap the second or lower screencloth. Tell us when ordering if you want us to notch them.
- Check stringer bar rubbers when changing screencloths

## Screencloth Ordering


When ordering screencloths we need to know the following information and preferably in this order:

- Quantity required x Length x Width
- Over hooks (OH) or Bands (OHB) if required
- Aperture, Wire Diameter, and any other instructions.



## Screencloth Widths

All hooked screencloths are measured over hooks (OH) or over hooks & bands (OHB) if required.

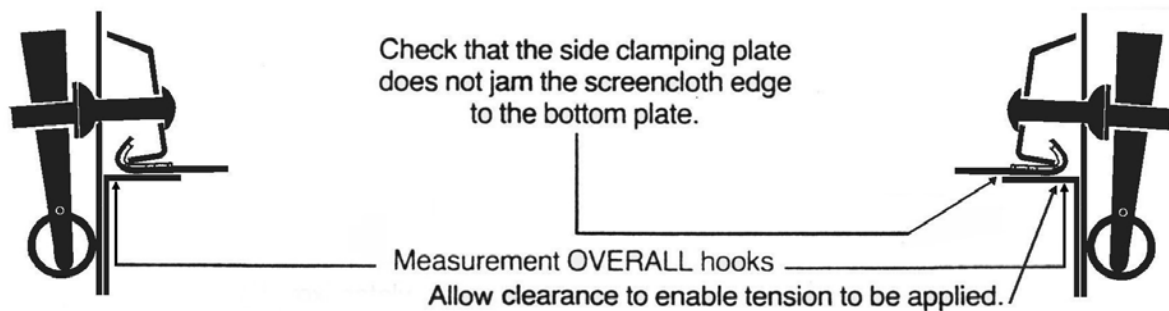

When measuring from the screen box the over hook measurement is 40mm less than the screen box dimension. This leaves 20mm clearance per side.

If the screencloth is wider than it is long or is to be hooked over its length, the measurement is still referred to as over hooks.

[www.advanced-engineering-group.com](http://www.advanced-engineering-group.com)

### Christchurch

P 0800 880 233

F 0800 880 234

[sales@advanced.eng.co.nz](mailto:sales@advanced.eng.co.nz)

### Brisbane

P 61 7 3713 7744

F 61 7 3713 7788

[sales@advanced-eng.com.au](mailto:sales@advanced-eng.com.au)

### Melbourne

P 61 3 9363 1577

F 61 3 9363 6099

[sales@advanced-eng.com.au](mailto:sales@advanced-eng.com.au)